

Betriebsanleitung Brushless DC Controller HST-350

Hacker Motor GmbH Schinderstraßl 32 84030 Ergolding



Hacker Motor GmbH Schinderstraßl 32 D-84030 Ergolding

Telefon:+49 871-953628-35Fax:+49 871-953628-29E-Mail:his@hacker-motor.comWeb:www.hacker-industrial-solutions.com





Sprache der Betriebsanleitung

Language of operating manual

Für die Inbetriebnahme des in dieser Anleitung beschriebenen Produktes ist es zwingend erforderlich, diese Betriebsanleitung sorgfältig zu lesen. Sollten sie die Anleitung in einer anderen Sprache als der ihnen vorliegenden benötigen, setzen sie sich bitte mit uns in Verbindung.

To commission the product described in these instructions, it is imperative to read this manual carefully. If you need the manual in a different language than the one available to you, please contact us. **English instructions start on page 33.**

Hacker Motor GmbH Schinderstraßl 32 D-84030 Ergolding Phone: +49-871-953628-35 Fax: +49-871-953628-29 Internet: www.hacker-industrial-solutions.com E-mail: his@hacker-motor.com

Inhaltsverzeichnis

Spracl	he der Betriebsanleitung	2
1. Wic	htige grundlegende Informationen	4
1.1	Über diese Betriebsanleitung	4
1.2	Allgemeine Beschreibung des Produkts	4
1.3	Gültigkeitsbereich der Betriebsanleitung	4
1.4	Zielgruppe	4
2. Sich	nerheit	5
2.1	Symbole	5
2.2	BestimmungsgemäßeVerwendung	5
2.3	Nutzungsart	6
2.4	Befugte Personen	6
2.5	Sicherheitshinweise	7
3. Tech	nnische Daten	8
3.1	Räumliche Grenzen	8
3.2	Schnittstellen	9
3.3	Umgebungsgrenzen	9
3.4	Spannungs-, Strom- und Temperaturgrenzen	9
4. Mor	ntage und Inbetriebnahme	10
4.1	Anschluss Phasen- und Akkukabel	10
4.2	Belegung Sensorschnittstelle	10
4.3	Anschlussschema	13
4.4	Motorsteuerung	16
4.5	Leistungssteuerung / Betriebsmodi	17
4.6	Kommunikations-Schnittstellen	18
4.7	Betrieb des Reglers mit der GUI und Einstellungen in der Software	19
5. Serv	vice und Support	31
6.	RechtlicheBestimmungen	31
6.1	Haftungsausschluss	31
6.2	CE-Konformitätserklärung	32
6.3	Kontaktinformationen	32

1. Wichtige grundlegende Informationen

1.1 Über diese Betriebsanleitung

Diese Betriebsanleitung enthält Informationen zum sicheren Betrieb dieses Produktes.

Lesen sie diese Betriebsanleitung und die enthaltenen Sicherheitshinweise aufmerksam vor der Inbetriebnahme des Reglers.

Diese Informationen sind für Personen bestimmt, die mit bzw. im Zusammenhang mit dem Produkt Aufgaben durchführen.

Überprüfen Sie bitte die Versions-/ Seriennummer Ihrer Hardware anhand des kleinen silbernen Etiketts auf dem Controller. Diese 8-stellige Zahl sollte mit 25xxxxxx beginnen.

1.2 Allgemeine Beschreibung des Produkts

Der HST-350 V2.5 ist ein high Performance brushless Motor Controller für den industriellen Einsatz. Er ist in der Lage (brushless) bürstenlose DC Motore (BLDC) mit Blockkommutierung zu betreiben.

Betriebsmodi:

- PWM-Regelung (Puls-Weiten-Modulation)
- Stromregelung
- Drehzahlregelung
- generatorischer Betrieb

Schnittstellen:

- CAN (isolierter CAN-Bus optional verfügbar)
- ADC (Analog/Digital-Wandler "Pedalsteuerung")
- PPM (Puls-Pausen-Modulation)

Features:

- geschützt gegen Überspannung und Überstrom
- cycle-by-cycle Betrieb
- präzise und effiziente Regelung bei höchster Dynamik.
- graphische Benutzeroberfläche (GUI) verfügbar

1.3 Gültigkeitsbereich der Betriebsanleitung

Diese Anleitung ist für folgende Produkte gültig:

• Für alle Regler der HST-350-Serie

1.4 Zielgruppe

Die in dieser Betriebsanleitung beschriebenen Tätigkeiten dürfen nur von Fachkräften durchgeführt werden. (Siehe Kapitel "Sicherheit")



Sicherheit

2.1 Symbole

Nachfolgend wird die in der Betriebsanleitung verwendete Symbolik erläutert:

1	GEFAHR
	Gefährdung, die, wenn sie nicht vermieden wird, den Tod oder schwere Verletzun-
	gen zur Folge hat.

WARNUNG

Gefährdung, die, wenn sie nicht vermieden wird, den Tod oder schwere Verletzungen zur Folge haben kann.

VORSICHT

Gefährdung, die, wenn sie nicht vermieden wird, eine geringfügige oder mäßige Verletzung zur Folge haben kann.

HINWEIS

Ursache, die, wenn sie nicht vermieden wird einen Sachschaden zur Folge haben kann.

INFO

Wichtige Information ohne sicherheitsrelevante Bedeutung.

2.2 Bestimmungsgemäße Verwendung

Das Produkt ist ausschließlich für folgende Verwendung bestimmt:

Der hier erfasste Brushless DC Controller ist bestimmungsgemäß als universell einsetzbarer Regler für bürstenlose Gleichstrommotoren mit und ohne Sensorik verwendbar.

Der Regler darf nicht in sicherheitsrelevanten Anwendungen eingesetzt werden, bei denen ein Ausfall eine Gefährdung von Personen zur Folge haben könnte.

Der Regler darf nur im eingebauten Zustand betrieben werden. Die Inbetriebnahme darf erst erfolgen, wenn die Einhaltung aller erforderlichen Schutzanforderungen der entsprechend anwendbaren Produktnormen und Richtlinien erfüllt sind.

Zur bestimmungsgemäßen Verwendung gehört auch die Einhaltung aller Vorgaben und Grenzen, die in der Betriebsanleitung erläutert werden.

Als nicht bestimmungsgemäße Verwendung im Sinne einer vorhersehbaren Fehlanwendung gilt

• Betrieb jenseits der vorgeschriebenen technischen Spezifikationen

2.3 Nutzungsart

Das Produkt ist vorgesehen zur Nutzung:

- · im Freien : JA (mit entsprechenden Randbedingungen)
- in überdachten und geschlossenen Räumen: JA
- am/unter/im Wasser: JA (mit entsprechenden Randbedingungen)
- in explosionsgefährdeten Bereichen: NEIN
- unter Tage: NEIN
- In sicherheitsrelevanten Anwendungen: NEIN
- in der Lebensmittelindustrie: NEIN
- · in medizinischen Bereichen: NEIN

2.4 Befugte Personen

Folgende Personen sind im Umgang mit dem Produkt befugt:

Personengruppe	Arbeiten	Qualifikation
Transportpersonal	Transport	Ausbildung und Erfahrung im Bereich Transport und Logistik
Elektrofachkraft	Elektrische Installation	Ausbildung im Bereich Elektro- nik, Erfahrung im Umgang mit Gefahren durch elektrischen Strom
	Reinigung, Inspektion	
Hersteller	Instandsetzung, Reparatur	

Der Bediener ist erst im Umgang mit dem Produkt befugt, wenn die Erst-Inbetriebnahme erfolgt ist und alle erforderlichen Schutzanforderungen der entsprechend anwendbaren Produktnormen und Richtlinien erfüllt sind.

2.5 Sicherheitshinweise

Um Personen- und Sachschäden zu vermeiden ist es wichtig, die nachfolgenden Sicherheitshinweise aufmerksam zu lesen und zu jedem Zeitpunkt zu befolgen.

GEFAHR

Stromschlag

Durch direkten Anschluss an das Wechselstrom Versorgungsnetz.

Der Regler darf nur mit einer geeigneten Spannungsquelle betrieben werden. Keinesfalls darf der Regler mit dem 230 bzw. 400V AC Energieversorgungsnetz verbunden werden.

GEFAHR

Unterbrechung der Stromversorgung

Bei einer Unterbrechung der Stromversorgung muss sichergestellt werden, dass daraus keine gefährliche Situation entstehen kann. Der Regler darf nur verwendet werden, wenn durch eine Unterbrechung der Stromversorgung keine gefährliche Situation entstehen kann.

WARNUNG

Sobald eine Spannungsquelle angeschlossen ist, besteht die Möglichkeit, dass der angeschlossene Motor anläuft (z.B. durch Fehlbedienung oder durch elektrischen Defekt). Deshalb ist von diesem Zeitpunkt an höchste Vorsicht geboten. Lassen Sie den Antrieb nie unbeaufsichtigt.

VORSICHT

Verbrennungen

Durch heiße Oberflächen.

Auch wenn der Regler innerhalb seiner technischen Spezifikationen betrieben wird, kann sich dieser stark erwärmen.

HINWEIS

EMV Störungen

Störung von EMV-störempfindlichen umliegenden Bauteilen.

EMV-störungsempfindliche Bauteile sollten in möglichst großer Entfernung zum Regler und Motor verbaut werden. Ist dies aufgrund von bauraumtechnischen Gründen nicht möglich, so sind diese durch geeignete Maßnahmen abzuschirmen.

3. Technische Daten

3.1 Räumliche Grenzen

Erforderlicher Montageraum:

- · ca. 185x183x41mm.
- · Gesamtgewicht ca. 1400g



3.2 Schnittstellen

Anschluss Phasenkabel und Spannungsversorgung

Für den Anschluss der Phasenkabel und der Spannungsversorgung verfügt der Regler über Schraubterminals mit M10 Innengewinde.

Anschluss Sensorik

TE Connectivity AMPSEAL 35-Polig

- Freigabeeingang (KL15, Zündschlüssel)
- CAN-Bus
- PWM-Eingang
- Analoger Eingang
- Not-Halt-Taster (Sicherheit)
- Motortemperatur
- Akkutemperatur

3.3 Umgebungsgrenzen

- Temperaturbereich (°C): -20 bis +60°C
- max. Betriebshöhe (NHN.): 4000m
- Relative Luftfeuchtigkeit: < 90% (nicht kondensierend)

3.4 Spannungs-, Strom- und Temperaturgrenzen

Der Regler ist für den Betrieb innerhalb der folgenden Grenzen vorgesehen:

	Min.	Max.
Versorgungsspannung [V DC]	32,0	58,8
Phasenstrom; Kurzzeitig [A]	-350,0	+350,0
Phasenstrom; Dauer [A]	-350,0	+350,0
Reglertemperatur [°C]	-20,0	+85,0

HINWEIS

Überspannung

Bitte beachten Sie, dass während eines Bremsvorgangs durch den Motor eine Spannung erzeugt und zurückgespeist wird.

Kann die erzeugte Energie nicht von der Spannungsquelle aufgenommen werden, erhöht sich die Spannungslage im System und kann im schlimmsten Fall eine Überspannung erzeugen die den Regler beschädigt oder zerstört.

Beachten sie darum unbedingt beim Betrieb an einem Netzteil eine ausreichend dimensionierte Kondensatorbatterie in die Versorgungsleitungen zu integrieren die die überschüssige Energie aufnehmen kann.

4. Montage und Inbetriebnahme

4.1 Anschluss Phasen- und Akkukabel

Für die Verkabelung zwischen Regler und Motor, sowie Regler und Akku ist selbst zu sorgen. Achten Sie auf die passenden Querschnitte zur Leistung.

Es ist vorgesehen die Phasen- und Akkukabel mit M10-Linsenkopfschrauben (Anzugsdrehmoment 17Nm) zu befestigen.

Bringen Sie dazu passende Ring- oder Rohrkabelschuhe an den Kabeln an.



4.2 Belegung Sensorschnittstelle

35 po	le socket ESC of HST-3	50				
Pin	Signal description	Signal SW/HW	VDC	Function	Description	Pin / Colour
1	signal ground of T- sensor (pin3)	GND	0	GND T-Sensor	10 pole	10 / black
2	Ignition Key / Klemme	ON/OFF	battery:	input (digital)	V_Bat	
	15		32.0 – 58.8		switch	
					(or optional: Display)	
3	motor temperature of coil U	T_Mot-U	15	input (analog)	10 pole	5 / white
4	motor temperature of coil V	T_Mot-V	15	input (analog)		
5	motor temperature of coil W	T_Mot-W	15	input (analog)		
6	Signal Ground	GND	0	GND		
7	accumulator tempe- rature	T_Bat-1	5	input (analog)	For use with KTY83 sensor	

Montage und Inbetriebnahme

8	CAN High	CAN_P	< 36	CAN Bus		
9	CAN Low	CAN_N	< 36	CAN Bus		
10	activation bootloader 1	Boot_34	5	input (Digital)	Internal function	
11	activation bootloader 2	Boot_69	5	input (Digital)	Internal function	
12	switch for brake	In_Brake	5	input (Digital)		
13	Reverse	Reverse direction of rotation	5	input (Digital)		
14	signal Ground	GND	5	GND	10 pole	1 /brown
15	pedal position sensor 1	PVS_1	5	input (analog)		
16	pedal position sensor 2	PVS_1	5	input (analog)		
17	signal ground	GND	0	GND		
18	PWM output control signal	o_in_PWM	5	input (Digital)		
19	PWM output control signal	o_in_PWM	5	output (Digital)		
20	TxD	TxD_Wireless	5	Transmit data UART	Internal function	
21	RxD	RxD_Wireless	5	Receive data UART	Internal function	
22	power supply HST350 steady state	V_Bat	accumulator 32– 58.8	Power supply	relay 150A V_Bat	5/ red
23	Relay control (-) coil	RLY_Bridge	V_Bat - 12	output (load)	Relaiy (-)-coil	
24	Hall sensor 1 (120° commutation)	Hall_1	5	input (digital)	10 pole	7 / yellow
25	Hall sensor 2 (120° commutation)	Hall_2	5	input (digital)	10 pole	2 /blue
26	Hall sensor 3 (120° commutation)	Hall_3	5	input (digital)	10 pole	3/dark gray
27	supply 5V	+5V_Track1	5	+5V supply (max. 30 mAh)		
28	Hall sensor 1a (180° commutation)	Hall_1a	5	input (digital)	Internal function	
29	Hall sensor 2a (180° commutation)	Hall_2a	5	input (digital)	Internal function	
30	Hall sensor 3a (180° commutation)	Hall_3a	5	input (digital)	Internal function	
31	CAN 2 H	CAN	<36	CAN Bus	Internal function	
32	CAN 2 L	CAN	>36	CAN Bus	Internal function	
33	signal ground*	ISO GND	0	isolated GND	*geht nicht für StdGND	
34	fan-control	FAN		output (load)		
35	Power supply 5V of Hall sensors (pin24-26,28-30)	+5V_Track2	5	+5V power supply	10 pole	6 / red



Montage und Inbetriebnahme

4.3 Anschlussschema



Der Anschluss ohne Relais ist möglich. Dazu benötigen Sie einen passenden Kabelsatz.



Beispiel (blaue Linien stellen speziellen Kabelbaum für die Anwendung ohne Relais dar):





Belegung für individuell zuweisbare Funktionen am Sensor Adapterkabel HST-350 (Hacker Art. Nr.: 10108147)

Stecker 35 polig 3-reihig; TE 776164-1; Pin-Position	Kabelfarbe	Funktion
2	schwarz	Klemme 15 / Zündung
6	braun	Erdung
7	Х	Akku-Temperatur
8	gelb	CAN High
9	grün	CAN Low
12	grau	Schalter für Bremse
13	Х	Laufrichtungsumkehr
16	weiß	Sensor 2 für Pedalposition
22	rot	Stromversorgung HST-350 Zustandsanzeige
27	lila	Stromversorgung 5V
31	orange	CAN 2 H
34	blau	Lüfter, Ansteuerung

Pin-Position 7 und 13 sind nicht belegt, bei gewünschter Funktion müssen Kabel selbst eingepinnt werden. Kabeltyp: 10adrig, awg20

Pin: #770520-1 Farnell – 2101973 TE Connectivity AMPSEAL 16-24

Je nach Anwendung, kann eine Funktion weggelassen werden (z.B. 34 – Lüfter), dafür kann die gewünschte Funktion eingepinnt werden (z.B. Akku-Temp.).

4.4 Motorsteuerung

Der HST-350 unterstützt verschiedene Modi zur Motoransteuerung. Den gewünschten Modus können Sie über die GUI (grafische Bedienoberfläche) einstellen.

Blockkommutierung (BLDC)

Im BLDC Mode wird der Motor über 2 Phasen angetrieben, die dritte Phase dient zur Ermittlung des Kommutierungszeitpunktes. Dieser Mode ist Standard für die allermeisten Brushless-Controller. Sie können hier zusätzlich wählen, ob Sie einen Betrieb mit oder ohne Hallsensoren wünschen. Auch ein Hybrid-Modus steht zur Verfügung, d.h. der Controller verwendet die Hall-Sensoren nur zum Anfahren und schaltet dann automatisch auf sensorlosen Betrieb um.

4-Quadrant-Betrieb

Der Motor kann sowohl vorwärts als auch rückwärts betrieben werden. Der Nutzer kann die Beschleunigungsrampen und auch den Rekuperationsstrom (ins System zurückgeführter Strom) individuell programmieren.

- Unidirektional (nicht rückwärts) ohne Rekuperation/Freilauf
- Unidirektional (nicht rückwärts) mit Rekuperation/aktives Bremsen
- Bidirektional (Rückwärtsmodus möglich) ohne Rekuperation/Freilauf
- Bidirektional (Rückwärtsmodus möglich) mit Rekuperation/ aktives Bremsen

4.5 Leistungssteuerung / Betriebsmodi

In Abhängigkeit von der Applikation kann der HST-350 für verschiedene Betriebsmodi konfiguriert werden. Den gewünschten Modus können Sie über die GUI (grafische Bedienoberfläche) einstellen.

Mögliche Kombinationen für die Ansteuerung und Regelung

	Regler-Ansteuerung	1	
Betriebsart Motor-Ansteuerung	CAN	ADC (Analog Digital Converter) – "Pedalsteuerung"	PPM
PWM Mode	Х	Х	Х
Stromregelung	Х	Х	Х
Drehzahlregelung	Х	Х	Х
Generatormode	Х		

Ansteuerung in den Betriebsarten ADC und PPM

Derzeit stehen mehrere Modi für die Leistungsregelung zur Verfügung

a.) ,Pedalsteuerung' (ADC) mit Analogeingang 0 – 5 V (Spannung)

- Verwendet analoge Eingänge PVS_1 und PVS_2 (vgl. Tabelle [Pin 15 / 16])
- Diese analoge Spannung kann mit dem Potentiometer eines Gaspedals erzeugt werden, welches entweder intern oder extern mit 5V versorgt werden muss.
- Standardmäßig arbeitet der Controller mit einem unteren Diagnoseabstand mit 0,5V (0-0,5V) und einem oberen Diagnoseabstand von 0,5V (4,5V-5V)
- Dabei entspricht 0,5V "0% Leistung" und 4,5V "100% Leistung"



Diese Daten sind im Basic-EEPROM parametrierbar.

b.) ,PPM control' (Puls-Pause-Modulation)

- Verwendet Eingangssignale des PPM-Eingangs (vgl. Tabelle 3-2 [Pin 18 / 19], nicht in Abb. 2-1 dargestellt)

Das PPM-Eingangssignal muss folgende (Servo-PPM, Puls-Pausen-Modulation)-Anforderungen erfüllen:

td = 1,0 ms bis 2,0 ms	: Pulslänge (on-time)
fper = 50 Hz bis 495 Hz	: Dauer des PPM-Signals
	0 V: Low-Signal während der Ausschaltzeit tper - td
	5 V: High-Signal während der Pulslänge td
Minimalwert	: td = 1,0 ms Pulslänge (-100% = umgekehrt)
Mittlere Einstellung	: td = 1,5 ms Pulsbreite (0% = Neutralstellung, Motor aus)
Maximalwert	: td = 2,0 ms Pulslänge (+ 100% = vorwärts)

PWM Mode (Duty-cycle control)

Montage und Inbetriebnahme

Der empfangene Setpoint (Sollwert) wird in ein PWM-Signal mit variablem Duty-Cycle umgerechnet der proportional zum Setpoint ist. Dabei wird die Spannung an der Motorphase verändert und damit die Geschwindigkeit des Motors. Die Motordrehzahl ändert sich dabei unter Last oder auch wenn sich die Eingangsspannung ändert. Die externe Steuerung muss dann entsprechend neue Signale senden, um dieses Verhalten zu kompensieren. Dieser Modus ist Standard in den meisten Controllern.

Stromregelung (Current / Tourque-Control)

Das vom Master empfangene Setpoint-Signal wird zu einem Motorstrom Setpoint umgerechnet und in einer direkten Regelschleife gesteuert. Dieser Modus erzeugt eine hohe Linearität zwischen Setpoint und Moment und ermöglicht eine schnelle und direkte Kontrolle über die Motorleistung. Dieser Modus eignet sich in besonderem Maße für Traktionsantriebe bei denen Nutzer das Moment regeln wollen.

Dieser Mode lässt sich auch mit einer Rekuperationsfunktion kombinieren. Dabei kann bei Setpoint Null ein Bremsstrom eingetragen werden.

Drehzahlregelung (RPM Mode)

Das vom Master empfangene Setpoint-Signal wird zu einem Zieldrehzahl-Setpoint umgerechnet und über PID Werte (Proportional, Integral und Differential) gesteuert. Dieser Modus steuert die Motordrehzahl unabhängig von der Last. Je nach verwendetem Motortyp und anliegender Last kann diese Steuerung träger reagieren als der in 4.2 genannte Current-Mode. Der Nutzer muss zudem die PID Werte sehr sorgfältig einstellen, um ein Überschwingen zu vermeiden.

Die Drehzahlregelung funktioniert in beide Richtungen. Wird die Motorwelle angetrieben, dann bremst der Controller auf die Zieldrehzahl und rekuperiert den Strom zurück in die Leistungsquelle (ACHTUNG: Geht nicht bei Netzteilen).

Generator Mode (Gen Mode)

Für diese Betriebsart sind Parameter wie Ladeschlussspannung und Zieldrehzahlen im EEProm einzutragen. In diesem Modus ist es möglich, den Controller als Laderegler oder auch als reinen Generator zu verwenden.

4.6 Kommunikations-Schnittstellen

5.1 CAN Eingang

Die integrierte CAN-Schnittstelle erlauben den zuverlässigen Einsatz von bidirektionaler Kommunikation selbst unter komplexen Bedingungen. Neben der Übertragung von Setpoints (Sollwerten) vom Master zum Controller können detaillierte Telemetriedaten vom System zurückgelesen werden. Dabei erhalten alle angeschlossenen HST-350 Controller eine eigene CAN-ID und können so ganz einfach über den CAN-Bus konfiguriert und upgedatet werden. Das CAN-Bus-Protokoll erhalten Sie auf Anfrage.

5.2 PPM Eingang

Der Controller unterstützt den R/C–Standard PPM-Eingang (Puls-Pause-Modulation) Diese Eingang ist optisch entkoppelt, um Störungen durch Mantelströme zu vermeiden. Der Setpoint wird errechnet aus einer Pulslänge zwischen 1 und 2 Millisekunden mit einer maximalen Wiederholrate von 500Hz. Der Nutzer kann dabei die Bandbreite für Vorwärts- und Rückwärtsbetrieb konfigurieren.

5.3 ADC (Uin) Analogeingang

Statt eines digitalen Signals kann auch eine analoge Spannung zwischen 0...5V an den jeweiligen Anschluss angelegt werden um Setpoint und Bremse (Rekuperation) zu steuern.

4.7 Betrieb des Reglers mit der GUI und Einstellungen in der Software

Für die Inbetriebnahme des Controllers ist Folgendes notwendig:

- Ein Windows Rechner mit installierter GUI
- Das Installationspaket bekommen Sie von uns nach Aufforderung.
- Einen USB to CAN Adapter (Best. #10107621)
 (Traiber kann über bie@beeker meter com angefre
- (Treiber kann über *his@hacker-motor.com* angefragt werden)
- Der Controller muss wie oben gezeigt angeschlossen und mit Spannung versorgt sein.
- Der Motor sollte sich für den Test frei drehen können

Verbinden Sie die CAN-Bus-Leitungen des 12-poligen Molex-Steckers:

- Gelb / CAN High [Pin 10]
- Grün / CAN Low [Pin 9]

mit dem CAN-Adapter. Löten Sie dazu entsprechende Kontakte an (Im Beispiel: Ø2 mm Goldkontakte)



Stecken Sie den CAN-Adapter in einen freien USB-Steckplatz.

- In aller Regel installiert sich der Treiber automatisch. Wenn alles einwandfrei installiert ist, leuchtet eine grüne LED am Adapter
- Starten Sie das Antriebssystem, indem Sie die Klemme 15 (Ignition key / Pin 2) einschalten.
- Öffnen Sie nun die grafische Benutzeroberfläche des Bootloaders "BL_V40" die Sie zuvor im Softwarepaket runtergeladen haben (s.o.). Es sollte die nachfolgend gezeigte Bedienoberfläche zu sehen sein:



Stellen Sie nun eine Verbindung zum Controller her, indem Sie

- o zunächst den Adapter auswählen (hier HerSi Adapter)
- o das System nun initialisieren (drücken Sie [Initialize])
- o Drücken Sie unten links auf [Get version], um sich die aktuell installierte Firmware-Version (Basis-Software des Controllers) anzeigen zu lassen.
- o nun sollte im Feld "Received Data" das Datenprotokoll sichtbar sein und sich permanent aktualisieren
- o drücken Sie dann auf [scan motors]; Sie sollten dann im Fenster "devices in normal mode" das Gerät 69 als Motor Nr 1 sehen
- Der Controller hat nun die Verbindung zur Programmieroberfläche erfolgreich hergestellt.
- Der Controller ist nun betriebsbereit und kann mit einer neuen Firmware geflasht oder parametriert werden

Montage und Inbetriebnahme



Bis HW-Version 24: Motor 1: 69er, Motor 2: 32er-Prozessor

Ab HW-Version 25: Motor 1: 69er, Motor 2: 35er-Prozessor

Flashen einer neuen Firmware

BL 2019.10.22 v40.01.01 E40	.01 Ver EE:40.	1.1.3				- 0	×
	Initialize	Release	Baudrate: 500 kBt/sec 🛛 🗸	Number Motor : 1		1	
Select Device	Boot Mode	Pertiware				Forma to DI	1
 ○ TMS320F28035 ③ TMS320F28069 	Boot	Open	Rash		info	Count F to BL	
Status BL	Operation Prog	ress				0	
PR			2020_05_27_v40_01_16			EE_ver39_04	Ц
Adapter Sho	w Buttons	Doc 📄		Ø ► 🔚 ee_g	jen		
O Peak-Can adapter		EE_ver39	04	eep	Hybrid		- 1
HerSi adapter		CL_EEdII.	.dll	معمر ہ	Sensor Less		- 1
end commands and data		Control_p	program_V40.01.09_E40.01.docx	O D MUS	35_V40.01.07_E	E40.01.bin	- 1
0 0x1F0F000 d0 0x21 d1 0x4 k1F02011 d0=0x81 d1=0x7F k1F02011 d0=0x81 d1=0x7F 0 0x1F0F000 d0 0x21 d1 0x4		Control_s LBIndust	program_V40.01.09_E40.01.exe rialCtris.dll sic.dll	o i Mue o Al Tak	\$9_v40.01_76_E	40.01.bin	

! Unbedingt zuerst Device 69 flashen, danach Device 35 !

- Nachdem Sie das Device "69" gescannt haben, wählen Sie in Ihrem Softwarepaket die aktuelle Firmware-Datei aus. Die Firmware ist die Basissoftware des Controllers. Diese finden Sie in dem Verzeichnis EE-VerXX. Dort wählen Sie bitte die Datei mit der Bezeichnung MU69 beginnend aus und bestätigen.
- Dann drücken Sie den Button [Boot] wie im nächsten Bild zu sehen; der Button wird blau und das System quittiert mit der Statusmeldung "Boot mode".

	intialize	Release	Baudrate: 5	500 kBit/sec 💛 Number Motor : 1		1
Select Device	Bost Mode	Firmware				
 TMS320F28032 TMS320F28035 TMS320F28069 	Boot	Open	Rash	File name: MU69_V39.04.21_E39.04.bin Entry point: 0x003F0000 Blocks: 7 Size: 138932	Info	Count F to BL
L	Operation Prog	vess				
R Boot mode	~					
Adapter	Show Buttons	Scan List Motors			Motors	

• Drücken Sie nun den Button [Flash], damit wird die Software auf den Controller übertragen.

O TMS320F28032	Boot Mode	Firmware		A.L	_	Forse to BL
 TMS320F28035 TMS320F28069 	Boot	Open Rash	ele name: M069_V39.04_21_E39 anty point: 0x003F0000 Bocks: 7	1,04.bm	Info	Count F to BL
katus L Witte data	Operation Progr	005				0
38328 / 138932						
38328 / 138932 Adapter Peak-Can adapter	Show Buttons	Scan List Motors Devices in Bootloader Mode	Devices in nomal Mode	Scan Motors	Motors Motor select	1 0 19 1

- Anhand des Fortschrittsbalkens können Sie den Verlauf beobachten
- Den gleichen Schritt wiederholen Sie nun f
 ür das Device "35"

BL 2019.07.22 v39.04.02 B	E39.04 Ver EE:39.	4.2.1					- 0	
	initialize	Release	Baudrate:	500 kBt/sec 🗸	Number Motor	1	1	
C TMS320F28032	Boot Mode	Firmware					Famala Bi	1
 TMS320F28035 TMS320F28069 	Boot	Open	Rash	File name: MU35_V39.04.04_E39 Entry point: 0x003F4000 Blocks: 7 Size: 51852	.04.bin	Info	Count F to BL	
SL Complete	Deration Prog	ess						
PR								
51852 / 51852								
Adapter § Peak-Can adapter	Show Buttons	Scan List Motors Devices in Bootloade	er Mode	Devices in normal Mode	Scan Motors	Motors Motor select	1 0 19 1	1
O HerSi adapter		69 Num Motor:1 ver	04.01	35 Num Motor:1 SPITest=0x0	E- CHI (D	No.	the track the	1

• Der Bootloader quittiert mit der Meldung "Complete"

Schreiben eines neuen EEPROMs

Immer wenn Sie einen Controller mit einer neuen FW-Version beschreiben, müssen Sie danach unbedingt ein neues EEPROM (Electrically Erasable Programmable Read-Only Memory) einlesen.

Im EEPROM sind alle zum Betrieb des Antriebs erforderlichen Parameter hinterlegt.

Gehen Sie dazu wir folgt vor:

- 1. Wechseln Sie ins Register "EEPROM" am rechten Rand des Bootloaders
- 2. Öffnen Sie den Pfad zum neuen EEPROM
- 3. Wählen Sie ein passendes EEPROM aus und bestätigen Sie; die Daten werden sofort zum Controller übertragen
- 4. Der Controller quittiert mit der Meldung "read EEPROM S4 ok"

Montage und Inbetriebnahme

N	Name	Mo	Value	Max	South A	Read El
1	CTRL Source	1	2	3	1-Pedal 2CAN 3-PPM	Basic Advanced Wate EEPBOM
2	CTRI Reder	1	2	4	1. PWM 2. Curr 3. Sneed 4. SneedTab	O Tech
3	Mode Sensor less	0	65535	65535	# 21930/0x55AA) Mode Sensor Jess	O Gen Save File To PC
4	DIR	0	0	1	Set Direction of intation	Erase EE Open File and Write To EEPROM
5	DIR OH CAN	0	65535	65535	f 21930(0x55AA) may set dr from CAN	
6	RPM MAX DIR1	500	3500	10000	Maximum motor RPM Directoin 1	IDw 0x1F01011 d0=0x07 i=31 2
7	RPM MAX DIRO	500	3500	10000	Maximum motor RPM Directoin 0	IDw 0x1F01011 d0+0xC71=31
8	Pole Pair MOT	2	21	36	Number motor pole pairs	
9	CURR Limit MAX	10	180	450	Max I(A) Curr&Speed Ctrl	
10	CURR_Limit_MIN	-350	-180	0	Min I(A) Curr&Speed Ctrl	
11	CURR_Break_SetPoint	0	10	350	Break Curr by "Curr Otrl" for null setpoint	
12	CURR_Break_From_Pin	0	10	350	Current Break From Pin "Curr Ott"	00 15 00 64 00 40 09 04 00 32 00 20 00 01 64 63
13	T_MOT_MAX	15	115	200	Max value monitoring temperature	
14	T_MOT_Warning	5	95	150	Warning temperature motor	Head EEPHOM STOK
15	T_ECU_MAX	15	115	200	Max value monitoring temperature	02 00 00 F0 01 E0 08 B8 00 0A 03 E8 00 96 03 70 11 30 00 28 00 14 03 E8 00 64 FF FF 00 32 00 00
16	T_ECU_Warning	5	100	200	Warning temperature ECU	FF FF 0D AC 00 0A 00 0A 00 0C 00 0A 00 0A FF FF
17	V_PVS_2_MIN	0.3	0.88	2	Minimum voltage pedal	00 30 01 P4 00 32 03 E8 03 E8 00 41 00 20 89 32
18	V_PVS_2_MAX	3	4.4	4.9	Maximum voltage pedal	Read EEPROM S2 Ok
19	V_PVS_2_START_OFFS	0.01	0.04	1.5	Voltage pedal start + MIN_PVS_2	03 00 00 64 00 0A 12 8E 00 FA 00 0A 02 00 00 01 03 F8 03 20 00 28 00 20 00 28 00 28 00 0A 05 DC
20	V_PVS_2_STOP_OFFSET	0.01	0.02	1.5	Voltage pedal stop + MIN_PVS_2	00 01 00 0A 00 0A 00 B4 FF 4C 00 64 55 AA 55 AA
21	V_PVS_2_DIAG_MAX	0	4.75	6	Max volt for diag pedal(# 0 - No diag)	FF FF 00 73 FF FF 00 64 55 AA FF FF FF FF D7 1F
22	V_PVS_2_DIAG_MIN	0	0.25	6	Min volt for diag pedal(# 0 - No diag)	Read EEPROM S3 Ok
23	CNT_ERR_PVS_2	0	10	32000	The error is set by N_ErrPedal times	04 00 FF FF FF FF FF FF FF FF 01 2C 00 28 FF FF
24	RAMP_STEP_UP	0	240	5000	Ramp up 0 - 5000 ms (step 10 ms) 0 - no rar	FF
25	RAMP_STEP_DOWN	10	480	5000	Ramp down 0 - 5000 ms (step 10 ms)	FF
26	V_Bat_Max	20	70	90	Maximum voltage battery	Read EEPROM S4 Ok
27	V_Bat_Min	0	32	90	Minimum voltage battery	
28	Pre-Charge_Time_MAX	10	1500	65535	Wait time for prechardge ms	4
29	CURR_limit_delta_A	12	12	100	For hysteresis Current_limit "PWM Ctrl"	HW-Vention ECU S/N Col
30	CURR_limit_stepUp	1	10	100	Limit stepUp DutyCycle in "PWM Ctrl"	24 2400086 3000
31	CURR limit stepDown	1	10	100	Limit stepDown DutyOyde in "PWM Orl"	

reenshots	eep		2020_05_27	v40_01_16	diverse
Doc	0 Þ	ee_gen	0 Þ	ee_V40_01_Can_Con_Otrl_Readl.eep	•
EE_ver39_04	0 +	i eep	- e • C	ee_V40_01_Can_Curr_Ctrl.eep	0
BL_V40.01.01_E40.01.exe	۰	eep_Hybrid	0 Þ	ee_v40_01_Can_PWM_Ct	•
CL_EEdII.dll	•	eep_Sensor_Less	0 Þ	ee_V40_01_Can_Speed_C 3	0
Control_program_V40.01.09_E40.01.docx	•	¹ MU35_V40.01.07_E40.01.bin	•	ee_V40_01_Can_SpeedTa	•
Section 2012 Control_program_V40.01.09_E40.01.exe	•	¹ MU69_v40.01.16_E40.01.bin	•	ee_V40_01_PPM_Curr_Ctrl.eep	•
LBIndustrialCtrls.dll	•			MOTO_ee_V40_01_Can_Curr_Ctrl_Pedal.ee	p o
PCANBasic.dll	0				
Baulelon biston: EW E Vost Applications but					

- Es werden Ihnen im Software-Paket verschiede Vorlagen zu häufig benutzen Anwendungen angeboten:
 - o Ee_gen für Generator Anwendungen
 - o Eep für Standardanwendungen mit Hallsensoren
 - o Eep_Hybrid für Anwendungen die einen Hybridbetrieb benötigen (mit/ ohne Sensorik)
 - o Eep_Sensor_Less für Anwendungen die ohne Hall-Sensoren auskommen

Innerhalb dieser Verzeichnisse wiederum finden Sie weiter detaillierte Vorlagen.

Montage und Inbetriebnahme

ee_V40_01_Can_Curr_Ctrl_Pedal.eep

- ee_V40_01_Can_Curr_Ctrl.eep
- ee_V40_01_Can_PWM_Ctrl.eep ee_V40_01_Can_Speed_Ctrl.eep
- ee_V40_01_Can_Speed_ctil.eep
- ee_V40_01_PPM_Curr_Ctrl.eep
- MOTO_ee_V40_01_Can_Curr_Ctrl_Pedal.eep

Dabei sind die Bezeichnungen wie folgt zu verstehen:

V40xx steht für die Versionsnummer gefolgt von der Control Source (CAN, ADC, PPM) und dem CTRL Regler (PWM, Current, Speed, ...)

Wir empfehlen die Inbetriebnahme via CAN und Current Control durchzuführen.

Im weiteren Verlauf der Inbetriebnahme und der Tests können Sie nun die Basiseinstellungen im EEPROM selbst vornehmen.

Grundsätzlich gilt, dass Sie aus Sicherheitsgründen ausschließlich Änderung an den "BASIC"-Einstellungen vornehmen können.

- Drücken Sie zunächst auf den Button [Read EEPROM] um die aktuellen Daten des Umrichters aus zulesen.
- Passen Sie die Parameter an, indem Sie Werte in den Spalten "Min", "Value" und "Max" eintragen. Limits die nicht über/unterschritten werden dürfen sind unter "Script" angegeben. Das Programm erlaubt keine Eingaben außerhalb der vorgegebenen Limits.

Es wird Ihnen von links nach rechts angezeigt:

- o N: Laufende Nummern der Programmzeilen
- o Name: Benennung der eingestellten Funktion
- o Min: Kleinstmöglicher Wert, der eingestellt werden kann
- o Value: Sollwert, bzw. Zuweisung einer Funktion oder Betriebsart
- o Max: Größtmöglicher Wert, der eingestellt werden kann
- o Script: Beschreibung der Programmzeile
- Drücken Sie danach den Button [Write EEPROM] um die neuen Werte abzuspeichern.
- Dieses EEPROM können Sie sich nun auf Ihren PC abspeichern mit dem Button [Save File to PC]. Sichern Sie sich regelmäßig Ihre verschiedenen Versionen ab, damit Sie immer wieder darauf zu greifen können, wenn Sie diese benötigen.

	Con parametera		\sim			Number Mator
I	N Name	Me	Value	Max	Sonat	Read EDPROM
	CTRL_Source	1	2	3	1-Pedal 2-CAN 3-PPM	O Advanced Wite EEPROM
	2 CTRL_Region	1.	2	4	1 - PINH 2 - Cur 3 - Speed 4 - SpeedTat	O Gen Sava Rie To PC
	3 Mode_Sensor_less	0	65535	65535	# 21930(0x55A4) Hode_Sensor_Jess	
	4 CKR	0	0	1	Set Direction of rotation	Date EE Open File for Write To EEP/ICM
	5 DIR_CH_CAN	0	61535	65535	# 21930(0x55A4) may set dr.from CAN	Cw 0x1F01011.40-0x35
	6 RPM_MAX_DIR1	500	3900	10000	Maximum motor RPM Detectors 1	D= 51F01011.49=5C71=31
	7 RPM_MAX_DIRD	500	\sim	10000	Maximum mator RPM Deectorn 0	
	8 Pale_Pak_MOT	2	21	36	Number motor pole pairs	
	9 CURR_Land_MAX	10	180	450	Max URI Curtificent Chi	
	10 CURR_LINK_MIN	-350	-180	0	Min U/Q Curll Speed Oxf	
	11 CURP_beak_SetPort_	0	10	350	Break Curr by "Curr Orf" for null setport	
	12 CURR_Beak_Ron_Pn	0	10	390	Current Break Aron Pin "Curr Cal"	00 15 00 54 00 AC 05 C4 00 32 00 20 00 01 F4 E3
	13 T_MOT_MAK	15	115	200	Max value monitoring temperature	Read EEPBOW ST/A
	14 T_MOT_Warring	5	95	150	Warring temperature notor	
	15 T_ECU_MAK	15	115	200	Max value monitoring temperature	11 30 00 20 00 14 03 E8 00 04 EF FF 00 32 00 00
	16 T_ECU_Wareig	5	100	200	Waring temperature BCU	FF FF 0D AC 00 0A 00 0A 00 0C 00 0A 00 0A 07 FF FF 00 30 01 F4 00 32 03 F8 03 F8 00 41 00 20 F9 32
	17 V.PV5,2,MN	0.3	0.88	2	Mrenum voltage pedal	And PERSON FLOR
	18 V_PVS_2_MAX	3 .	4.4	4.9	Maxmum vohage pedal	Prese EEPHCH SLOK
	19 V.PVS.2,START_OFFS.	0.01	0.04	1.5	Votage pedal start + MIN_PVS_2	03 00 00 64 00 0A 12 8E 00 FA 00 0A 02 00 00 01 03 E8 03 20 00 28 00 20 00 28 00 28 00 0A 05 0C
	20 V_PVS_2_STOP_OFFSET	0.01	0.02	1.5	Votage pedal stop + MIN_PVS_2	00 01 00 0A 00 0A 00 84 FF 4C 00 64 55 AA 35 AA
	21 V_PVS_2_DIAG_NAK	0	4.75	6	Max volt for dag pedal@ 0 - No dag)	10 10 W 12 10 10 W 04 13 W 10 10 10 U
	22 V_PV5_2_DIAG_MIN	0	0.25	6	Min with for diag peckel (F D - No diag)	Plead EUPHON 53 Ok
	23 CNT_ERR_PVS_2	0	10	32900	The error is set by N_ErPedal times	04 00 FFF FFF FFFFFFFFFFFFFFFFFFFFFFFFF
	24 PARP_STEP_UP	0	240	\$000	Ramp up 0 - 5000 ms (step 10 ms) 0 - no rar	FO FO AT AT AT AN AT
	25 PAOP_STEP_DOWN	10	400	\$000	Ramp-down 0 - \$2000 ms (dep 10 ms)	HINNING HINNING
	26 V_Bet_Max	20	70	90	Maxmum voltage battery	Plead EEPRON S4 Ok
	27 V_Bat_Mn	0	32	90	Mnimum voltage battery	
	28 Pe-Owge_Tee_NKX	10	1500	\$5535	Wat time for prechardge ma	-
	29 CURR Just Justa A	12	12	100	For hysterees Careet Jest "PWN Cot"	PHI Verson BCU S-N Suit
	30 CURR_Inst_mapLip	1	10	100	Line step Up Duty Cycle in "PWM Cyr"	24 240006 0705

Aktivieren eines Sensors: Die unter "Script" erwähnte Zahl muss im Feld "Value" eingetragen werden, hier am Beispiel des Temperatursensors des Akkus:

T_Mot_W_EN	0	65535	65535	if 21930(0x55AA) Sensor T motor W Enable. It requires r
Temp_Bat_EN	0	21930	6 €\$35 →	f 21930(0x5)AA) Sensor temp Battary Enable. It require
Hybrid_mode	0	65535	65535	if 21930(0x55AA) Hybrid_mode. Start Halls - then sensor
RPM Halls To ZC	160	300	800	RPM from Halls to zerro-crossing

Die Register Advanced, TECH und GEN können nur in Zusammenarbeit mit der entsprechenden Projektleitung bei Hacker angepasst werden. Nachfolgend finden Sie die Einstellung des Basic Menü, welches Sie frei anpassen können. Die Werte sind selbsterklärend. Da die Software des Controllers einen ständigen Erweiterungsprozess unterliegt, kann die Darstellung von der tatsächlichen Version abweichen.

Nachdem Sie das EEPROM erfolgreich beschrieben und parametriert haben, können Sie nun beginnen, das System in Betrieb zu nehmen.

Schließen Sie dazu bitte den Bootloader, damit das CAN Interface für den nächsten Schritt frei wird.

Dazu vor dem Herausziehen des CAN-Adapters oben/links den Button [Release] drücken.



Nun muss der Regler neu gestartet werden, trennen Sie ihn dazu ca. 10 Sekunden von der Spannungsversorgung und schließen Sie ihn dann wieder an.

Für weitere Unterstützung wenden Sie sich an his@hacker-motor.com

HINWEIS Ändern von Parametern

Das Ändern der Parameter erfordert ein fundiertes Fachwissen. Falsche Parameter können zur Zerstörung des Antriebs führen und Folgeschäden verursachen.

Bedienung der grafischen Benutzeroberfläche

• Nachdem Sie den Controller erfolgreich angeschlossen und in Betrieb genommen haben, können Sie den Motor über das Graphical User Interface (GUI) ansteuern und überwachen

Öffnen Sie dazu im Softwarepaket die Anwendung "Control_Program*.exe

	Doc	
	EE_ver39_04	
-0	BL_V40.01.01_E40.01.exe	
	CL_EEdII.dll	
0-	Control_program_V40.01.09_E40.01.docx	0
	Control_program_V40.01.09_E40.01.exe	. 0
D	LBIndustrialCtris.dll	0
	PCANBasic.dll	0

Sie sollten dann den folgenden Bildschirm erhalten:



- 1. Stellen Sie zunächst die Verbindung GUI mit dem Controller her
 - Wählen Sie dazu den CAN Adapter aus
 - Drücken Sie den Button [Initialize]
- 2. Nach erfolgreicher Verbindung sollten Sie sofort die Live-Daten des Controllers in der GUI sehen können.
 - Diese wären z.B. Die anliegende Spannung als auch
 - Der Betriebsmode und
 - Die FW-Versionen
 - Durch das Aktivieren von "Debug Info" werden Ihnen Sensorwerte angezeigt

Im Screenshot erkennen Sie, dass wir über CAN steuern und Current Control als Betriebsmodus ausgewählt haben.

Im nächsten Schritt schalten wir den Controller ein; drücken Sie dazu den Button [ON]



Debug Menu Dewor	Main Error EEPROM Tab Adv
ON OFF Power Off Dir1 D1 Stop	Adapter Baud Peak-Can Adapter 500 k
V_Bat 32.47 V_Bridge 14.42 Limit I Tab Adv Limit RPM 0	HerSi Adapter Debug Info Current A
Mileage m 0	-100 10

Nun sollte die Vorladung aktiviert werden und die Bridge Spannung (Spannung am Ausgang der dem Regler vorgeschalteten Kondensatoren) auf Versorgungsspannung steigen; Sie hören dabei das Relais einschalten.



- Das System quittiert mit "Power On"
 - Ab jetzt ist die Antriebseinheit bereit zum Betrieb

HINWEIS

Wir empfehlen Ihnen dringend, die Antriebseinheit vor dem Einbau in die Applikation, auf einem separaten Prüfstand in Betrieb zu nehmen und auf korrekte Funktion zu überprüfen.

Bedenken Sie bitte, dass Sie mit hohen elektrischen Strömen und großen, mechanischen Kräften arbeiten.

Montage und Inbetriebnahme



Stellen Sie den Controller auf den Modus "CAN" (siehe EEPROM, Zeile 1 -> "Value"=2, mit den Pfeiltasten links/rechts können Sie durch die Menüs ("Main"/"Error"/"EEPROM"/… schalten).

Sofware control 2020.12.24 V40.01.16	E40.01 Ver El	E:40.1	.1.3				
ebug Menu Power	Main	Error	EEPROM Tab Adv	Err Counts	Tab		
ON OFF Power On	EEPR	N N	Name	Mn	Value	Max	Script
	•	1	CTRL_Source	1	(2)	3	1-Pedal 2-CAN 3-PPM
		2	CTRL_Regler	1	2	4	1 - PWM 2 - Curr 3 - Speed 4 - SpeedTab
Bat 44.39 Phase Current		3	Mode_Sensor_less	0	65535	65535	# 21930(0x55AA) Mode_Sensor_less

Damit sind Sie in der Lage, direkt über die Benutzeroberfläche Sollwert-Eingaben machen und den bestimmungsgemäßen Betrieb zu erproben.

- Beginnen Sie mit dem Power Modus "Current Control" ([EEPROM], Zeile 2 -> Value: 2); dieser eignet sich besonders gut zur Überprüfung der korrekten Funktion.
- Sie können nun auf der linken Seite (wieder zurück zu [Main]) der GUI im Bereich "Set Point" direkte Werte für den Strom eingeben; beginnen Sie zunächst mit kleinen Werten zwischen 5 und 10 A. Überprüfen Sie dabei die Drehrichtung des Antriebs; diese können Sie im Bootloader in Zeile 4 einstellen. Negative Werte wirken sich als Bremse aus (Rekuperation).

Geben Sie einen Wert innerhalb der vorgegebenen Limits (hier im Beispiel: 0 - 350 / -350 - 0) ein und bestätigen Sie dann mit [Set]. Der Schieberegler springt an die entsprechende Stelle.



- Optional können Sie auch den Schieberegler in der Mitte unten vorsichtig von links nach rechts be wegen; damit ist eine stufenlose Regelung möglich.
- Mit dem Button [Zero] wählen Sie direkt Setpoint Null, um das System anzuhalten.
- Sollte sich das System an dieser Stelle richtig verhalten, dann haben Sie damit die korrekte Funk tion bestätigt und können mit dem Betrieb des Systems wie gewünscht fortfahren.
- Nach beenden Ihres Tests drücken Sie den Button [OFF] (oben/links) um die Einheit auszuschalten; Sie hören dabei der Relais klacken.

Fehlermeldung "Error"

Falls sich ein Fehler im System eingeschlichen hat, wird Ihnen das im Menü "Error", angezeigt; auch wird die entsprechende Anzeige "Error" oben/links rot unterlegt.

ebug Menu Poweor	Main Error EEPROM Ta	b Adv Er Counts Tab				
ON OFF Power On Dir1 D1 Encor EN_ERIDGE_MU Sut STAGE_OV V_BM 44.39 Phase Current /_BMdye 14.61 RPM Mean RE Tab. Adv 0 RE PM Mean 0 0	Erer 1 Mater Units ERR_Time_Out_Prech ERR_SOG_pret ERR_SOG_pret ERR_SOG_battery ERR_SOG_battery ERR_SOG_battery ERR_SOG_battery ERR_SOG_Pretect ERR_TIMEOUT_SPate ERR_RLY_SOC_A	Enry 2 Mater Units ERR Bat Max ERR Bat Mon ERR_Sp_TabLRC ERR_Sp_TabLRC ERR_Ver_ECU ERR_Dr_From_CAN ERR_Ver EC or Prog ERR_Rog_ModePy ERR_Temp_Bat_Short ERR_Temp_Bat_Short	Eror 3 Mator Units	Error 1 Mater carinal ERR_time_Out_int_32 ERR_time_Out_int_32 ERR_tition_time_Of ERR_titiong_t_tytebpl ERR_titiong_t_tytebpl ERR_CAN_Send_Areay ERR_tital_Sequence ERR_tital_Sequence ERR_tital_Sequence	Erer 2 Mater control ERR, BridgelMan ERR, Probablan ERR, Probablan ERR, Probablan ERR, Probablan ERR, Ver, SPI, Tab, JRC ERR, Ver, SPI, Tab, JRC ERR, Ver, SCU ERR, Ver, SCU ERR, INOT, Twar > Trans	Enrr 3 Matar control ERR_inconstantPase ERR_TypeRegRy ERR_Mode_CM ERR_BAT_Twar > Tro

HINWEIS

Stellen Sie einen Defekt fest, nehmen Sie den Antrieb keinesfalls in Betrieb und wenden Sie sich an unseren Service.

Hilfsmittel GRAPH

Noch detailliertere Informationen erhalten Sie über das Register [Graph] (unten/links). Hier können Sie sich den Verlauf anzeigen lassen und speichern.

Hier können Sie den Antrieb zeitgleich über den Schieberegler im Startmenü ansteuern.

Setzen Sie ein Häkchen bei "Active", um die Messung in Echtzeit zu verfolgen.



Was Sie der GUI entnehmen können

Die GUI hilft Ihnen Ihren Antrieb maximal effizient einzustellen.

Spannung, Strom, Stromverbrauch, Laufrichtung und Werte der angeschlossenen Sensoren (Temperaturen, Drehzahl) verschaffen Ihnen ein Bild über die Effizienz und Funktion Ihres Antriebs. Wenn Sie Werte ändern, vergleichen Sie die ausgegebenen Parameter nach der Änderung. So können Sie den Antrieb Ihren Vorstellungen entsprechend optimieren oder an eine neue Umgebung anpassen.

5. Service und Support

Sollten trotz fachgerechter Handhabung und Beachtung aller Hinweise aus der Betriebsanleitung Probleme auftreten, wenden sie sich bitte telefonisch oder per E-Mail an unseren Service.

Reparatursendungen senden Sie bitte mit vollständig ausgefüllten Reparaturauftrag an:

Hacker Motor GmbH

Schinderstraßl 32D-84030 ErgoldingTelefon:+49-871-953628-35Fax:+49-871-953628-29Internet:www.hacker-industrial-solutions.comE-Mail:his@hacker-motor.com

Das Formular für Reparaturaufträge und unsere Supportzeiten finden sie online unter:

www.hacker-motor.com/service-support

6. Rechtliche Bestimmungen

6.1 Haftungsausschluss

Da uns sowohl eine Kontrolle der Handhabung, die Einhaltung der Montage- und Betriebshinweise, sowie der Einsatz des Produktes und dessen Wartung nicht möglich ist, kann von der Fa. Hacker Motor GmbH keinerlei Haftung für Verluste, Schäden oder Kosten gewährt werden. Jeglicher Anspruch auf Schadensersatz, der sich durch den Betrieb, den Ausfall bzw. Fehlfunktionen ergeben kann, oder in irgendeiner Weise damit zusammenhängt wird abgelehnt. Für Personenschäden, Sachschäden und deren Folgen, die aus unserer Lieferung oder Arbeit entstehen übernehmen wir keine Haftung. Soweit gesetzlich zugelassen wird die Verpflichtung zur Schadensersatzleistung, aus welchen Rechtsgründen auch immer, auf den Rechnungswert unseres an dem Ereignis unmittelbar betroffenen Produkt begrenzt. Dies gilt nicht, soweit wir nach zwingenden gesetzlichen Vorschriften oder grober Fahrlässigkeit unbeschränkt haften müssen.

6.2 CE-Konformitätserklärung

Hiermit erklärt die HerSi Electronic Development GmbH & Co. KG., dass sich dieses Produkt in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der EMV-Richtlinie 2014/30/EU befindet.

Die Konformitätserklärung zu diesem Produkt können sie hier anfordern:

HERSI Electronic Development GmbH & Co. KG

Geschäftsführer Klaus Herdt

Einsteinstr. 9 93055 Regensburg GERMANY

Phone: +49 941 28092013

E-Mail: info@hersi.biz

Registergericht: Amtsgericht Regensburg HRA 7014



6.3 Kontaktinformationen

Der Vertrieb des HST-350 Controllers sowie des Zubehörs erfolgt über die

Hacker Motor GmbH

Geschäftsführer: Rainer Hacker

Schinderstraßl 32 D-84030 Ergolding

 Telefon:
 +49-871-953628-35

 Fax:
 +49-871-953628-29

 Internet:
 www.hacker-industrial-solutions.com

 E-Mail:
 his@hacker-motor.com

Registergericht: Amtsgericht Landshut HRB 8052

WEEE-Reg.-Nr. DE 55352581

Technische Änderungen behalten wir uns vor, für Druckfehler wird keine Haftung übernommen.



Table of contents

Langu	age of the operating instructions	2
1	Importantbasicinformation	34
1.1	Aboutthismanual	34
1.2	Generaldescription of the product	34
1.3	Scopeofvalidityoftheoperatingmanual	34
1.4	Targetgroup	34
2	Safety	35
2.1	Symbols	35
2.2	Intended use	35
2.3	Type of use	36
2.4	Authorized persons	36
2.5	Safety instructions	37
3	Technical data	38
3.1	Dimensions	38
3.2	Interfaces	39
3.3	Ambient limits	39
3.4	Voltage, current and temperature limits	39
4	Mounting and commissioning	40
4.1	Connection of phase and battery cable	40
4.2	Assignment sensor interface	40
4.3	Wiring diagram	43
4.4	Motor control	46
4.5	Power control / operating modes	47
4.6	Communication interfaces	48
4.7	Operation of the controller with the GUI and settings in the software	49
5.	Service and support	61
6.	Legal regulations	61
6.1	Disclaimer	61
6.2	CE Declaration of Conformity	62
6.3	Contact information	62

1. Important basic information

1.1 About this manual

These operating instructions contain information on the safe operation of this product.

Read these operating instructions and the safety instructions contained carefully before commissioning the controller.

This information is intended for persons who perform tasks with or in connection with the product.

Please check the version/serial number of your hardware against the small silver label on the controller. This 8-digit number should begin with 25xxxxx.

1.2 General description of the product



The HST-350 V2.5 is a high performance brushless motor controller for industrial use. It is able to drive (brushless) brushless DC motors (BLDC) with block commutation.

Operating modes:

- PWM control (pulse width modulation)
- current control
- speed control
- regenerative operation

Interfaces:

- CAN (isolated CAN bus optionally available)
- ADC (analog/digital converter "pedal control")
- PPM (pulse-pause modulation)

Features:

- protected against overvoltage and overcurrent
- cycle-by-cycle operation
- precise and efficient control at highest dynamics.
- graphical user interface (GUI) available

1.3 Scope of validity of the operating instructions

This manual is valid for the following products:

• For all controllers of the HST-350 series

1.4 Target group

The activities described in these operating instructions may only be carried out by qualified personnel. (See chapter "Safety")

Safety

2.1 Symbols

The symbols used in the operating instructions are explained below:

Hazard that, if not avoided, will result in death or serious injury.

WARNING

Hazard which, if not avoided, could result in death or serious injury.

ATTENTION

Hazard that, if not avoided, may result in a minor or moderate injury.

NOTE

Cause which, if not avoided, can result in property damage.

INFO

Important information without safety relevance.

2.2 Intended use

The product is intended exclusively for the following use:

The Brushless DC Controller covered here is intended to be used as a universal controller for brushless DC motors with and without sensors.

The controller must not be used in safety-relevant applications where failure could endanger persons.

The controller may only be operated when installed. Commissioning may not take place until compliance with all necessary protection requirements of the corresponding applicable product standards and directives has been ensured.

Intended use also includes compliance with all specifications and limits explained in the operating instructions.

The following is considered to be unintended use in the sense of foreseeable misuse

• Operation beyond the prescribed technical specifications

2.3 Type of use

The product is intended for use

- outdoors : YES (with appropriate boundary conditions)
- in covered and enclosed spaces: YES
- on/under/in water: YES (with appropriate boundary conditions)
- in potentially explosive atmospheres: NO
- underground: NO
- In safety-relevant applications: NO
- in the food industry: NO
- in medical areas: NO

2.4 Authorized persons

The following persons are authorized to handle the product:

Group of persons	Works	Qualification
Transport personnel	Transport	Education and experience in the field of transport and logis-tics
Electrician	Electrical installation	Education in the field of elec- tronics, experience in dealing with hazards caused by elect- ric current
	Cleaning, inspection	
Manufacturer	Maintenance, repair	

WARNING

The operator is not authorized to handle the product until it has been put into operation for the first time and all the necessary protection requirements of the relevant applicable product standards and directives have been met.

2.5 Safety instructions

To avoid personal injury and damage to property, it is important to read the following safety instructions carefully and to follow them at all times.

Electric shock

By direct connection to the AC supply network.

The controller may only be operated with a suitable voltage source. Under no circumstances may the controller be connected to the 230 or 400V AC power supply network.

Interruption of the power supply

If the power supply is interrupted, it must be ensured that no dangerous situation can arise from this. The controller may only be used if an interruption in the power supply cannot result in a dangerous situation.

As soon as a voltage source is connected, there is a possibility that the connected motor will start (e.g. due to incorrect operation or electrical defect). Therefore, extreme caution is required from this point on. Never leave the drive unattended.

ATTENTION

Burns

Due to hot surfaces.

Even if the controller is operated within its technical specifications, it may become very hot.

NOTE

EMC Interference

Disturbance of surrounding components sensitive to EMC interference.

Components sensitive to EMC interference should be installed as far away as possible from the controller and motor. If this is not possible for reasons of installation space, they must be shielded by suitable measures.

3. Technical data

3.1 Dimensions

Required mounting space:

- Approx. 185x183x41mm.
- Total weight approx. 1400g



3.2 Interfaces

Connection of phase cable and power supply

For the connection of the phase cables and the power supply, the controller has screw terminals with M10 internal thread.

Sensor connection

TE Connectivity AMPSEAL 35-pole

- Enable input (KL15, ignition key)
- CAN bus
- PWM input
- Analog input
- Emergency stop button (safety)
- Engine temperature
- Battery temperature

3.3 Ambient limits

- Temperature range (°C): -20 to +60°C
- max. operating altitude (NHN.): 4000m
- Relative humidity: < 90% (non-condensing)

3.4 Voltage, current and temperature limits

The controller is designed to operate within the following limits:

	Min.	Max.
Supply voltage [V DC]	32,0	58,8
Phase current; short-time [A]	-350,0	+350,0
Phase current; continuous [A]	-350,0	+350,0
Controller temperature [°C]	-20,0	+85,0

NOTE

Overvoltage

Please note that during a braking process a voltage is generated by the motor and fed back.

If the generated energy cannot be absorbed by the voltage source, the voltage level in the system increases and can, in the worst case, generate an overvoltage which damages or destroys the controller.

Therefore, when operating with a power supply unit, it is essential to integrate a sufficiently dimensioned capacitor bank in the supply lines that can absorb the excess energy.

4. Mounting and commissioning

4.1 Connection of phase and battery cables

You have to take care of the cabling between controller and motor as well as controller and battery yourself.

Make sure that the cross-sections are suitable for the power.

The phase and battery cables are to be fastened with M10 pan-head screws (tightening torque 17Nm).

Attach suitable ring or tube cable lugs to the cables for this purpose.



4.2 Assignment sensor interface

35 po	35 pole socket ESC of HST-350										
Pin	Signal description	Signal SW/HW	VDC	Function	Description	Pin / Colour					
1	signal ground of T- sensor (pin3)	GND	0	GND T-Sensor	10 pole	10 / black					
2	Ignition Key / Klemme	ON/OFF	battery:	input (digital)	V_Bat						
	15		32.0 – 58.8		switch						
					(or optional: Display)						
3	motor temperature of coil U	T_Mot-U	15	input (analog)	10 pole	5 / white					
4	motor temperature of coil V	T_Mot-V	15	input (analog)							
5	motor temperature of coil W	T_Mot-W	15	input (analog)							
6	Signal Ground	GND	0	GND							
7	accumulator tempe- rature	T_Bat-1	5	input (analog)	For use with KTY83 sensor						

Mounting and commissioning

8	CAN High	CAN_P	< 36	CAN Bus		
9	CAN Low	CAN_N	< 36	CAN Bus		
10	activation bootloader 1	Boot_34	5	input (Digital)	Internal function	
11	activation bootloader 2	Boot_69	5	input (Digital)	Internal function	
12	switch for brake	In_Brake	5	input (Digital)		
13	Reverse	Reverse direction of rotation	5	input (Digital)		
14	signal Ground	GND	5	GND	10 pole	1 /brown
15	pedal position sensor 1	PVS_1	5	input (analog)		
16	pedal position sensor 2	PVS_1	5	input (analog)		
17	signal ground	GND	0	GND		
18	PWM output control signal	o_in_PWM	5	input (Digital)		
19	PWM output control signal	o_in_PWM	5	output (Digital)		
20	TxD	TxD_Wireless	5	Transmit data UART	Internal function	
21	RxD	RxD_Wireless	5	Receive data UART	Internal function	
22	power supply HST350 steady state	V_Bat	accumulator 32– 58.8	Power supply	relay 150A V_Bat	5/ red
23	Relay control (-) coil	RLY_Bridge	V_Bat - 12	output (load)	Relaiy (-)-coil	
24	Hall sensor 1 (120° commutation)	Hall_1	5	input (digital)	10 pole	7 / yellow
25	Hall sensor 2 (120° commutation)	Hall_2	5	input (digital)	10 pole	2 /blue
26	Hall sensor 3 (120° commutation)	Hall_3	5	input (digital)	10 pole	3/dark gray
27	supply 5V	+5V_Track1	5	+5V supply (max. 30 mAh)		
28	Hall sensor 1a (180° commutation)	Hall_1a	5	input (digital)	Internal function	
29	Hall sensor 2a (180° commutation)	Hall_2a	5	input (digital)	Internal function	
30	Hall sensor 3a (180° commutation)	Hall_3a	5	input (digital)	Internal function	
31	CAN 2 H	CAN	<36	CAN Bus	Internal function	
32	CAN 2 L	CAN	>36	CAN Bus	Internal function	
33	signal ground*	ISO GND	0	isolated GND	*geht nicht für StdGND	
34	fan-control	FAN		output (load)		
35	Power supply 5V of Hall sensors (pin24-26,28-30)	+5V_Track2	5	+5V power supply	10 pole	6 / red



Mounting and commissioning





Connection without relay is possible. You will need a suitable cable set for this.

▲ DANGER The system without relay may only be carried out with batteries suitable for this purpose. The system without relay must never be connected to a power supply unit, regenerated current can destroy this and cause life-threatening damage.

Example (blue lines represent special wiring harness for application without relay):





Assignment for individually assignable functions at the sensor adapter cable HST-350 (Hacker Art. No.: 10108147)

Plug 35 pole 3-row; TE 776164-1; Pin position	Cable color	Function
2	black	Terminal 15 / Ignition
6	brown	Ground
7	х	Battery temperature
8	yellow	CAN High
9	green	CAN Low
12	grey	Brake switch
13	Х	Direction reversal
16	white	Sensor 2 for pedal position
22	red	Power supply HST-350 Sta- tus indicator
27	purple	Power supply 5V
31	orange	CAN 2 H
34	blue	Fan, control

Pin position 7 and 13 are not assigned, if desired function cables must be pinned themselves. Cable type: 10 core, awg20

Pin: #770520-1 Farnell - 2101973 TE Connectivity AMPSEAL 16-24

Depending on the application, a function can be omitted (e.g. 34 - fan), but the desired function can be pinned in (e.g. battery temp.).

4.4 Motor control

The HST-350 supports different modes for motor control. The desired mode can be set via the GUI (graphical user interface).

Block commutation (BLDC)

In BLDC mode the motor is driven by 2 phases, the third phase is used to determine the commutation time. This mode is standard for most brushless controllers.

Here you can additionally choose whether you want operation with or without Hall sensors. A hybrid mode is also available, i.e. the controller uses the Hall sensors only for start-up and then automatically switches to sensorless operation.

4-quadrant operation

The motor can be operated both forward and backward. The user can individually program the acceleration ramps and also the recuperation current (current returned to the system).

- Unidirectional (not reverse) without recuperation/free wheeling
- Unidirectional (not reverse) with recuperation/active braking
- Bidirectional (reverse mode possible) without recuperation/freewheeling
- Bidirectional (reverse mode possible) with recuperation/active braking

4.5 **Power control / operating modes**

Depending on the application, the HST-350 can be configured for different operating modes. You can set the desired mode via the GUI (graphical user interface).

Possible combinations for control and regulation

	Regler-Ansteuerung					
Operating mode Motor control	CAN	ADC (Analog Digital Converter) – "Pedal control"	PPM			
PWM Mode	Х	Х	Х			
Current control	X	Х	Х			
Speed control	Х	Х	Х			
Generator mode	Х					

Control in the operating modes ADC and PPM

Currently there are several modes available for power control

a.) ,Pedal control' (ADC) with analog input 0 - 5 V (voltage)

- Uses analog inputs PVS_1 and PVS_2 (see table [Pin 15 / 16]).
- This analog voltage can be generated with the potentiometer of an accelerator pedal, which must be supplied either internally or externally with 5V.
- By default, the controller works with a lower diagnostic distance of 0.5V (0-0.5V) and an upper diagnostic distance of 0.5V (4.5V-5V).
- Thereby 0.5V corresponds to "0% power" and 4.5V to "100% power".



These data are parameterizable in the Basic-EEPROM.

b.) ,PPM control' (pulse-pause modulation)

- Uses input signals of the PPM input (see Table 3-2 [Pin 18 / 19], not shown in Fig. 2-1).

The PPM input signal must meet the following (servo PPM, pulse-pause modulation) requirements:

td = 1.0 ms to 2.0 ms :	pulse length (on-time)
fper = 50 Hz to 495 Hz :	duration of the PPM signal
	0 V: Low signal during the off-time tper - td
	5 V : High signal during pulse length td
Minimum value :	td = 1.0 ms pulse length (-100% = reverse)
Average setting :	td = 1.5 ms pulse width (0% = neutral position, motor off)
Maximum value :	td = 2.0 ms pulse width (+ 100% = forward)

PWM Mode (Duty-cycle control)

The received setpoint is converted into a PWM signal with a variable duty cycle which is proportional to the setpoint. This changes the voltage at the motor phase and thus the speed of the motor. The motor speed changes under load or when the input voltage changes. The external controller must then send new signals accordingly to compensate for this behavior. This mode is standard in most controllers.

Current control (Current / Tourque control)

The setpoint signal received from the master is converted to a motor current setpoint and controlled in a direct control loop. This mode creates a high linearity between setpoint and torque and allows a fast and direct control of the motor power. This mode is particularly suitable for traction drives where users want to control the torque.

This mode can also be combined with a recuperation function. A braking current can be entered at setpoint zero.

Speed control (RPM mode)

The setpoint signal received from the master is converted to a target speed setpoint and controlled by PID values (proportional, integral and differential). This mode controls the motor speed independently of the load. Depending on the type of motor used and the load applied, this control may respond more sluggishly than the current mode mentioned in 4.2. The user must also set the PID values very carefully to avoid overshoot.

Speed control works in both directions. If the motor shaft is driven, then the controller brakes to the target speed and recuperates the current back into the power source (CAUTION: Does not work with power supplies).

Generator Mode (Gen Mode)

For this mode, parameters such as charging end voltage and target speeds must be entered in the EE-Prom. In this mode it is possible to use the controller as a charge controller or also as a pure generator.

4.6 Communication interfaces

4.6.1 CAN input

The integrated CAN interface allows the reliable use of bidirectional communication even under complex conditions. Besides the transmission of setpoints from the master to the controller, detailed telemetry data can be read back from the system. All connected HST-350 controllers receive their own CAN ID and can thus be easily configured and updated via the CAN bus. The CAN bus protocol is available on request.

4.6.2 PPM input

The controller supports the R/C standard PPM input (Pulse-Pause-Modulation) This input is optically decoupled to avoid interference from sheath currents. The setpoint is calculated from a pulse length between 1 and 2 milliseconds with a maximum repetition rate of 500Hz. The user can configure the bandwidth for forward and reverse operation.

4.6.3 ADC (Uin) analog input

Instead of a digital signal, an analog voltage between 0...5V can be applied to the respective port to control setpoint and brake (recuperation).

4.7 Operating the controller with the GUI and settings in the software

The following is required for commissioning the controller:

- A Windows computer with the GUI installed.
- You will receive the installation package from us upon request.
- A USB to CAN adapter (order #10107621)
- (Driver can be requested via *his@hacker-motor.com*)
- The controller must be connected and powered as shown above.
- The motor should be able to rotate freely for the test

Connect the CAN bus lines of the 12-pin Molex connector:

- Yellow / CAN High [Pin 10]
- Green / CAN Low [Pin 9]

with the CAN adapter. Solder on corresponding contacts (In the example: Ø2 mm gold contacts).



• Plug the CAN adapter into a free USB slot.

As a rule, the driver installs automatically. If everything is installed correctly, a green LED on the adapter lights up.

- Start the drive system by switching on terminal 15 (Ignition key / Pin 2).
- Now open the graphical user interface of the bootloader "BL_V40" which you have downloaded before in the software package (see above). You should see the user interface shown below:



- Now establish a connection to the controller by
 - o first select the adapter (here HerSi adapter)
 - o now initialize the system (press [Initialize])
 - o press [Get version] at the bottom left to display the currently installed firmware version (basic software of the controller).
 - o now in the field "Received Data" the data log should be visible and permanently updated o then press [scan motors]; you should then see device 69 in the "devices in normal mode" window as motor no. 1
- The controller has now successfully connected to the programming interface.
- The controller is now ready for operation and can be flashed or parameterized with new firm-ware.

Mounting and commissioning

Х

Bootloader

EEPROM

Checking the hardware version

Change from bootloader to EEPROM mask (right, above)

Up to version 24 -> Firmware version 39 From version 25 -> Firmware version 40



Up to HW version 24: Motor 1: 69er, Motor 2: 32er processor

From HW version 25: Motor 1: 69er, Motor 2: 35er processor

Flashing a new Firmware

5 BL 2019.10.22 V40.01.01	E40.01 Ver EE:40.1	1.1.3			0.77	- ×
	Initialize	Release	Baudrate: 500 k.Bit/sec 💫 🗸	Number Motor : 1	1	
Select Device	Boot Mode	Prinware			Forme	to Bl
 TMS320F28035 TMS320F28069 	Boot	Open	Rash		Info Count F	to BL
Status					0	
BL	Operation Progr	ess				
PR						
			2020_05_27_v40_01_16		EE_ver39	_04
Adapter	Show Buttons	Doc		Ø ⊧ 🚞 ee_gen		
O Peak Can adapter		EE_ver39	_04	🖉 🕨 🚞 eep		
C. Least and another		BL_V40.0	01.01_E40.01.exe	🗢 📄 eep_Hyb	rid	
HerSi adapter		0 00 00 00				
HerSi adapter		Control r	.dll	O D MU25 V	40.01.07 E40.01 his	
HerSi adapter end commands and de	ata	CL_EEdil	dll program_V40.01.09_E40.01.docx	MU35_V	40.01.07_E40.01.bin	

! Be sure to flash Device 69 first, then Device 35 !

- After you have scanned the device "69", select the current firmware file in your software package. The firmware is the basic software of the controller. You will find it in the directory EE-VerXX. There please select the file starting with the name MU69 and confirm.
- Then press the button [Boot] as shown in the next picture; the button turns blue and the system acknowledges with the status message "Boot mode".

	intialze	Release	Baudrate: 5	00 kBt/sec - Number Motor :	1	1
Select Device	Boot Made	Firmware				_
 TMS320F28032 TMS320F28035 TMS320F28069 	Boot	Open	Rash	File name: MU69_V39.04.21_E39.04.bin Entry point: 0x003F0000 Blocks: 7 Star: 139902	Info	Forse to BL Count F to BL
Ratus				13033E		0
R Boot mode	Operation Prog	ess				
Adapter	Show Buttons	Scan List Motors Devices in Bootk	ader Mode	Devices in normal Mode Scan Motors	Motors	
C Bard Cas advates					the second second second	

• Now press the [Flash] button, this will transfer the software to the controller.

O TMS320F28032	Boot Mode	Firmware	<u> </u>			Forme to BL
 TMS320F28035 TMS320F28069 	Boot	Open Flas	Ele name: MU69_V39.04.21_E39 Antry point: 0x003F0000 Blocks: 7 139932	9.04.bin	Info	Count F to BL
. Write data	Operation Progr					0
R 38328 / 138932						
R	Show Buttons	Scan List Motors Devices in Bootloader Mod	e Devices in normal Mode	Scan Motors	Motors Motor select	1 0 19 1

- You can observe the progress on the basis of the progress bar
- Now repeat the same step for the device "35"

	Initialize	Release	Baudrate:	500 kBt/sec ~	Number Motor : 1		1
O TMS320E28032	Boot Mode	Firmware					Come and Come
 TMS320F28035 TMS320F28069 	Boot	Open	Rash	File name: MU35_V39.04.04_E39 Entry point: 0x003F4000 Blocks: 7 Size: 51852	.04.bin	info	Court F to BL
Complete	peration Prog	ess		-			
51852 / 51852							
	how Buttons	Scan List Motors				Motors	
Adapter S		Devices in Bootlo	ader Mode	Devices in normal Mode	Scan Motors	Motor select	1 . 19 1
Adapter S Peak-Can adapter						PROFILE PERCENT	

The bootloader acknowledges with the message "Complete".

Writing a new EEPROM

Whenever you write a new FW version to a controller, it is essential to read in a new EEPROM (Electrically Erasable Programmable Read-Only Memory) afterwards. All parameters required for operating the drive are stored in the EEPROM. Proceed as follows.

- 1. change to the register "EEPROM" at the right edge of the bootloader
- 2. open the path to the new EEPROM
- 3. select a suitable EEPROM and confirm; the data will be transferred to the controller immediately
- 4. the controller acknowledges with the message "read EEPROM S4 ok".

Mounting and commissioning

DM	I parameters					Number Motor : 1
N	Name	Mn	Value	Max	Script ^	Read El
1	CTRL_Source	1	2	3	1-Pedal 2-CAN 3-PPM	O Advanced Write EEPROM
2	CTRL_Regler	1	2	4	1 · PWM 2 · Curr 3 · Speed 4 · SpeedTab	O Tech O Geo
3	Mode_Sensor_less	0	65535	65535	f 21930(0x55AA) Mode_Sensor_less	o del
4	DIR	0	0	1	Set Direction of rotation	Erase EE Open File and Write To EEPROM
5	DIR_CH_CAN	0	65535	65535	# 21930(0x55AA) may set dir from CAN	IDw 0x1F01011 d0r=0x35
6	RPM_MAX_DIR1	500	3500	10000	Maximum motor RPM Directoin 1	IDw 0x1F01011 d0+0xC7i+31 2
7	RPM_MAX_DIR0	500	3500	10000	Maximum motor RPM Directoin 0	IDW 0x IP01011 during 0 / IP31
8	Pole_Pair_MOT	2	21	36	Number motor pole pairs	
9	CURR_Limit_MAX	10	180	450	Max I(A) Curr&Speed Ctrl	
10	CURR_Limit_MIN	-350	-180	0	Min I(A) Curr&Speed Ctrl	
11	CURR_Break_SetPoint	0	10	350	Break Curr by "Curr Otrl" for null setpoint	
12	CURR_Break_From_Pin	0	10	350	Current Break From Pin "Curr Ott"	00 15 00 64 0D AC 09 C4 00 32 00 2D 00 01 F4 E3
13	T_MOT_MAX	15	115	200	Max value monitoring temperature	Devel EEPDONI STOL
14	T_MOT_Warning	5	95	150	Warning temperature motor	
15	T_ECU_MAX	15	115	200	Max value monitoring temperature	1 30 00 28 00 14 03 E8 00 64 FF FF 00 32 00 00
16	T_ECU_Warning	5	100	200	Warning temperature ECU	FF FF 0D AC 00 0A 00 0A 00 0C 00 0A 00 0A FF FF 00 30 01 F4 00 32 03 F8 03 F8 00 41 00 20 F9 32
17	V_PVS_2_MIN	0.3	0.88	2	Minimum voltage pedal	
18	V_PVS_2_MAX	3	4.4	4.9	Maximum voltage pedal	Read EEPROM S2 Ok
19	V_PVS_2_START_OFFS	0.01	0.04	1.5	Votage pedal start + MIN_PVS_2	03 00 00 64 00 0A 12 8E 00 FA 00 0A 02 00 00 01 03 F8 03 20 00 28 00 2D 00 2B 00 28 00 0A 05 DC
20	V_PVS_2_STOP_OFFSET	0.01	0.02	1.5	Votage pedal stop + MIN_PVS_2	00 01 00 0A 00 0A 00 B4 FF 4C 00 64 55 AA 55 AA
21	V_PVS_2_DIAG_MAX	0	4.75	6	Max volt for diag pedal(# 0 - No diag)	FF FF 00 /3 FF FF 00 64 55 /44 FF FF FF FF 17 0/ IF
22	V_PVS_2_DIAG_MIN	0	0.25	6	Min volt for diag pedal(# 0 - No diag)	Read EEPROM S3 Ok
23	CNT_ERR_PVS_2	0	10	32000	The error is set by N_ErrPedal times	04 00 FF FF FF FF FF FF FF FF 01 2C 00 28 FF FF
24	RAMP_STEP_UP	0	240	5000	Ramp up 0 - 5000 ms (step 10 ms) 0 - no rar	FF
25	RAMP_STEP_DOWN	10	430	5000	Ramp down 0 - 5000 ms (step 10 ms)	FF
26	V_Bat_Max	20	70	90	Maximum voltage battery	Read EEPROM S4 Ok
27	V_Bat_Min	0	32	90	Minimum voltage battery	
28	Pre-Charge_Time_MAX	10	1500	65535	Wait time for prechardge ms	4
29	CURR_limit_delta_A	12	12	100	For hysteresis Current_limit "PWM Ctrl"	HW-Version ECU S/N Soft
30	CURR_limit_stepUp	1	10	100	Limit stepUp DutyCycle in "PWM Oth"	24 2400086 301
31	CURR limit stepDown	1	10	100	Limit stepDown DutyCycle in "PWM Cof"	

creenshots	eep	2020_05_27_v40_01_16	diverse
Doc EF ver39.04	Ø ► ee_gen	Ø ► <u>ca_V40_01_Can_Curt_Cirt</u>	Peadl.eep O
 BL_V40.01.01_E40.01.exe 	eep_Hybrid	○ ►	•
 CL_EEdII.dll Control_program_V40.01.09_E40.01.docx 	 eep_Sensor_L MU35_V40.0 	Less O F ee_V40_01_Can_Speed_C 1.07_E40.01.bin O ee_V40_01_Can_SpeedTa	3
Control_program_V40.01.09_E40.01.exe LBIndustrialCtris.dll D04NPacia dll	• MU69_v40.01	1.16_E40.01.bin ee_V40_01_PPM_Curr_Ctrl.	eep o rr_Ctrl_Pedal.eep o
PCANBasic.dll			

- The software package includes several templates for frequently used applications:
 - o Ee_gen for generator applications
 - o Eep for standard applications with Hall sensors
 - o Eep_Hybrid for applications that require hybrid operation (with/ without sensors)
 - o Eep_Sensor_Less for applications that do not require Hall sen sors

Within these directories you will find further detailed templates.

•

Mounting and commissioning



The designations are to be understood as follows: V40xx stands for the version number followed by the control source (CAN, ADC, PPM) and the CTRL controller (PWM, Current, Speed, ...).

We recommend commissioning via CAN and Current Control.

In the further course of commissioning and testing, you can now make the basic settings in the EEPROM yourself.

Basically, for safety reasons, you can only make changes to the "BASIC" settings.

- First press the button [Read EEPROM] to read out the current data of the inverter.
- Adjust the parameters by entering values in the "Min", "Value" and "Max" columns. Limits that may not be exceeded/fallen short of are specified under "Script". The program does not allow any input outside the given limits.

It is displayed from left to right:

- o N: Sequence numbers of the program lines
- o Name: Designation of the set function
- o Min: Smallest possible value that can be set
- o Value: Setpoint, or assignment of a function or operating mode
- o Max: Largest possible value that can be set
- o Script: Description of the program line
- Then press the button [Write EEPROM] to save the new values.
- You can now save this EEPROM to your PC with the button [Save File to PC]. Save your different versions regularly, so that you can always access them again when you need them.



Activating a sensor: The number mentioned under "Script" must be entered in the "Value" field, here using the example of the temperature sensor of the battery:

T_Mot_W_EN	0	65535	65535	if 21930(0x55AA) Sensor T motor W Enable. It requires r
Temp_Bat_EN	0	21930	6535	€ 21930(0x5) AA) Sensor temp Battary Enable. It require
Hybrid_mode	0	65535	65535	if 21930(0x55AA) Hybrid_mode. Start Halls - then sensor
RPM Halls To ZC	160	300	800	RPM from Halls to zerro-crossing

The Advanced, TECH and GEN tabs can only be customized in cooperation with the corresponding project management at Hacker. Below you will find the setting of the Basic menu, which you can customize freely. The values are self-explanatory. Since the software of the controller is subject to a constant extension process, the representation can deviate from the actual version.

After you have successfully written and parameterized the EEPROM, you can now start to put the system into operation.

To do this, please close the bootloader so that the CAN interface is free for the next step.

To do this, press the [Release] button at the top/left before pulling out the CAN adapter.



Now the controller must be restarted. To do this, disconnect it from the power supply for approx. 10 seconds and then reconnect it.

For further support contact his@hacker-motor.com

NOTE

Changing parameters

Changing the parameters requires sound specialist knowledge. Incorrect parameters can lead to the destruction of the drive and cause consequential damage.

Operating the graphical user interface

- After you have successfully connected and commissioned the controller, you can control and monitor the motor via the Graphical User Interface (GUI).
- To do this, open the "Control_Program*.exe" application in the software package.



You should then get the following screen:

	Sofware control 2019.10.02 V39.04.15 E39.04 Ver EE	39.42.1					-	□ ×
	Debug Menu Domor	Env EDWEON Tab Adv Er Courts Tab						
	ON OFF Power Off	Nitialize Release	·					1
	EN BRIDGE MUS SIM STAGE_ON	O Pros Con Aug						
2	V_Be 32.47 Pass Careet	Cretury Ma						
	Line RPM Aday Unit RPM Node Break	Current A	Distant V					
	Meage m 0 Set Point	- ' au au' -	Bridge V					
	0-310 0 Set Zero	-300 200-					0	ear Vees
	-350-0 0 Set (01) (00)	:	S					
	Advance 0.00 Current Angle 0.00			En CAN	S rothing define	50	End Beak Po	
	Temperature Histor 0 ECU 21	· · · · · · · · · · · · · · · · · · ·		DeCAN	Halls delive Encoder define	Size III	Set	
	Hats Prev		•			Page Erry and State	Ues	
2 (Rest pass	Er Out A Current	Cakulated	Motortemper	KL15 ON OFF	flag State32 0x4201	Rep State 60	0+8409
	Marine 0 0 0	0000 0000	0.0000 A		angent -	\$aj2 9ate32 0x0000	fag2 State63	0+0000
	Scan Graph E	Ref Mb Set Current to				4ag2 Erer 32 0x0000	Reg2 Error 63	Ge0000
								,
	ert adpaint down							2
	Dut Dut	Cycle (215) Send sepont PWN PN	polar Sat Point M					
3	Montor Units 2019 07 22 Ver39 04 03 E39 04	PA Get back seport PWH	Only plus	0				
•	Mean comma 2019 01 31 Me28 04 08 E28 04	<u></u>	Only ninus					
	10000							
	ECU S/N 2400006 Versoin HWI 24 N motor 1 Pole-p	eks 21						

1. first establish the connection GUI with the controller.

- Select the CAN adapter
- Press the [Initialize] button

After successful connection you should immediately see the live data of the controller in the GUI.

- These would be e.g. the present voltage as well as
- The operating mode and
- The FW versions
- By activating "Debug Info" sensor values will be shown to you.

In the screenshot you can see that we control via CAN and have selected Current Control as operating mode.

In the next step we switch on the controller by pressing the [ON] button.



Debug Menu Dewor		Main	Error E	EPROM 1	Tab Adv
ON OFF Power Of Dir1 D1 S	f top	lr A	nitialize dapter	Relea	Baudr
EN_BRIDGE_MU Soft STAGE_ON	1		 Peak-Ca HerSi Ad 	n Adapter lapter	500 k
V_Bridge 14.42 Umit I Tab Adv Umit RPM Mode Break	A		Debug Info	Currer	nt A
Mileage m 0				00	′′′, 10

Now the precharge should be activated and the bridge voltage (voltage at the output of the capacitors connected upstream of the controller) should rise to the supply voltage; you will hear the relay switch on.



• The system acknowledges with "Power On".

From now on the drive unit is ready for operation

NOTE

We strongly recommend that you commission the drive unit on a separate test bench and check it for correct functioning before installing it in the application.

Please bear in mind that you are working with high electrical currents and large mechanical forces.

🖶 Sofware control 2020.01.22 V40.01.04 640.01	Ver 8540.1.1.3	- 0 X
Power	Nam Error EEPHON Tab Adv Er Counts Tab	
ON OFF Power Off Dir1 D1 Stop EN_BRIDGE_INU Set STADE_ON Image: Set STADE_ON V_Ber 32.61 Presc Cenert V_Ber 32.61 0 V_Ber 32.61 Presc Cenert V_Ber 0 RPM Mean Dentifier 0 RPM Mean Dentifier 0 RPM Mean Dist 0 Dist RPM Mean <	Petrose Pet	Error Passillemager etcPend-0x0000002
Scensor loss Terpentue RATAT & ECU 25 Bit 79 Stan CAN Curr Chi Paul parent Rotan Scen Rev Scen Pave	PID Out A Carent Current Battery NTC_Terms J E0 0.000 0.000 0.0000 0.0000 0.0000 0.0000 25.25 23.30 Paid Pob Set Current raw Get Current 0 23.30	And Matur tensor KL 15 Page Env and State 15 26 26 .
Graph Hardware Revear Links 2020 01 15 Ver42.01.06 540.01 Mator control 2020 01 15 Ver42.01.06 540.01 Get War 35 Ver EE: 40 1	C DV/Code G118 Send setpoint PWM B52 CMPA Get back setpoint PMM G 0.0011. 0 PmM CMPA Get back setpoint PMM G 0.0011. 0 Pmdd Vilt G5.54	Schieberegler

Set the controller to "CAN" mode (see EEPROM, line 1 -> "Value"=2, with the arrow keys left/right you can switch through the menus ("Main"/"Error"/"EEPROM"/...).

Sofware control 2020.12.24 V40.01.16 E4	0.01 Ver I	EE:40.1	.1.3				
ebug Menu Power	Main	Error	EEPROM Tab Adv	Err Counts	Tab		
ON OFF Power On	EEP	ROM pa	rameters				
Dir1 D1 Error		N	Name	Min	Value	Max	Script
	•	1	CTRL_Source	1	(2)	3	1-Pedal 2-CAN 3-PPM
EN_BRIDGE_MU		2	CTRL_Regler	1	2	4	1 - PWM 2 - Curr 3 - Speed 4 - SpeedTab
/ Bat 44.39 Phase Current		3	Mode_Sensor_less	0	65535	65535	# 21930(0x55AA) Mode_Sensor_Jess

This enables you to make setpoint entries directly via the user interface and to test the intended operation.

- Start with the power mode "Current Control" ([EEPROM], line 2 -> Value: 2); this is particularly suitable for checking the correct function.
- You can now enter direct values for the current on the left side (back to [Main]) of the GUI in the "Set Point" area; start with small values between 5 and 10A at first. Check the direction of rotation of the drive; you can set this in the bootloader in line 4. Negative values act as a brake (recuperation). Enter a value within the specified limits (here in the example: 0 350 / -350 0) and then confirm with [Set]. The slider jumps to the corresponding position.



- Optionally, you can also use the slider in the center at the bottom to move carefully from left to right; this allows stepless control.
 - With the button [Zero] you directly select setpoint zero to stop the system.
- If the system behaves correctly at this point, you have confirmed correct operation and can continue to operate the system as desired.
- When your test is complete, press the [OFF] button (up/left) to turn the unit off; you will hear the relay click.

Error message

If an error has occurred in the system, it will be indicated in the "Error" menu; the corresponding "Error" display will also be highlighted in red at the top/left.

Sofware control 2020.12.24 V40.01.16 E4	0.01 Ver EE-01.1.3					
ebug Menu Powar	Man Error EEPROM Tab.	Adv Er Counts Tab				
ON OFF Power On Dir1 D1 Ence EN_BRIDGE_NU g Set STAGE_OV V_Bre 44.39 Phase Current V_Bre 14.61 Phase Current A RFM Mean RFM Mean 0	Env 1 Mater Units ERR_Time_Out_Prech ERR_SCOL_prech ERR_SCOL_prech ERR_SCOL_prech ERR_UCK_Write ERR_Write_Protect ERR_Write_Protect ERR_RLY_OC ERR_RLY_OC_M	Enry 2 Maior Units ERR Bat Max ERR Bat Ma ERR_Sol_DataURC ERR_Sol_TabURC ERR_Sol_TabURC ERR_Sol_TabURC ERR_Sol_TabURC ERR_Sol_ModePy ERR_Temp_Bat_Short ERR_Temp_Bat_Short	Eror 3 Motor Units	Enr 1 Mar control ERR, Nex2ate ERR, Jies2ate ERR, ECU, Temp, OH ERR, MOT, Temp, OH ERR, MOT, Temp, OH ERR, SPL ROFF ERR, CAN, Send, Anay ERR, CAN, Send, Anay ERR, Vial, Securice ERR, Vial, Securice	Enr 2 Mate control ERR_BridgeMax ERR_BridgeMa ERR_PridgeMa ERR_PridgeMa ERR_PridgeMax ERR_Prigreg ERR_Prigreg ERR_Prigreg ERR_Var_ECU ERR_ECU_Twar > Tmax ERR_MOT_Twar > Tmax	Enr 3 Mate control ERR_inconstater/Pase ERR_TypeReg/ly ERR_Mode_CM ERR_BAT_Twar > Tex

NOTE

If you detect a defect, do not operate the drive under any circumstances and contact our service department.

GRAPH tool

You can get even more detailed information via the [Graph] tab (bottom/left). Here you can display and save the history.

Here you can control the drive simultaneously via the slider in the start menu.

Put a check mark at "Active" to follow the measurement in real time.



What you can take from the GUI

The GUI helps you to set your drive to maximum efficiency.

Voltage, current, current consumption, running direction and values of the connected sensors (temperatures, speed) give you a picture of the efficiency and function of your drive. If you change values, compare the output parameters after the change. This way you can optimize the drive according to your ideas or adapt it to a new environment.

5. Service and support

If problems occur despite proper handling and observance of all instructions in the operating manual, please contact our service department by telephone or e-mail.

Please send repair shipments with a completely filled out repair order to:

Hacker Motor GmbH

Schinderstraßl 32D-84030 ErgoldingPhone:+49-871-953628-35Fax:+49-871-953628-29Internet:www.hacker-industrial-solutions.comE-Mail:his@hacker-motor.com

The form for repair orders and our support times can be found online at:

www.hacker-motor.com/service-support

6. Legal regulations

6.1 Disclaimer

Since it is not possible for us to control the handling, the compliance with the assembly and operating instructions, as well as the use of the product and its maintenance, no liability for loss, damage or costs can be granted by Hacker Motor GmbH. Any claim for damages that may result from the operation, failure or malfunction, or in any way related thereto, is rejected. We shall not be liable for personal injury, property damage and their consequences arising from our delivery or work. To the extent permitted by law, the obligation to pay damages, on whatever legal grounds, shall be limited to the invoice value of our product directly affected by the event. This does not apply insofar as we must assume unlimited liability according to mandatory legal regulations or gross negligence.

6.2 CE Declaration of Conformity

Hereby, HerSi Electronic Development GmbH & Co. KG. that this product is in compliance with the essential requirements and other relevant provisions of the EMC Directive 2014/30/EU.

You can request the declaration of conformity for this product here:

HERSI Electronic Development GmbH & Co. KG

Geschäftsführer Klaus Herdt

Einsteinstr. 9 93055 Regensburg GERMANY

Phone: +49 941 28092013

E-Mail: *info@hersi.biz* Registry Court: Amtsgericht Regensburg HRA 7014



6.3 Contact information

The HST-350 controller and accessories are distributed by

Hacker Motor GmbH Geschäftsführer: Rainer Hacker

Schinderstraßl 32 D-84030 Ergolding

 Phone:
 +49-871-953628-35

 Fax:
 +49-871-953628-29

 Internet:
 www.hacker-industrial-solutions.com

 E-Mail:
 his@hacker-motor.com

Registry Court: Amtsgericht Landshut HRB 8052

WEEE-Reg.-Nr. DE 55352581

We reserve the right to make technical changes, no liability is accepted for printing errors.